
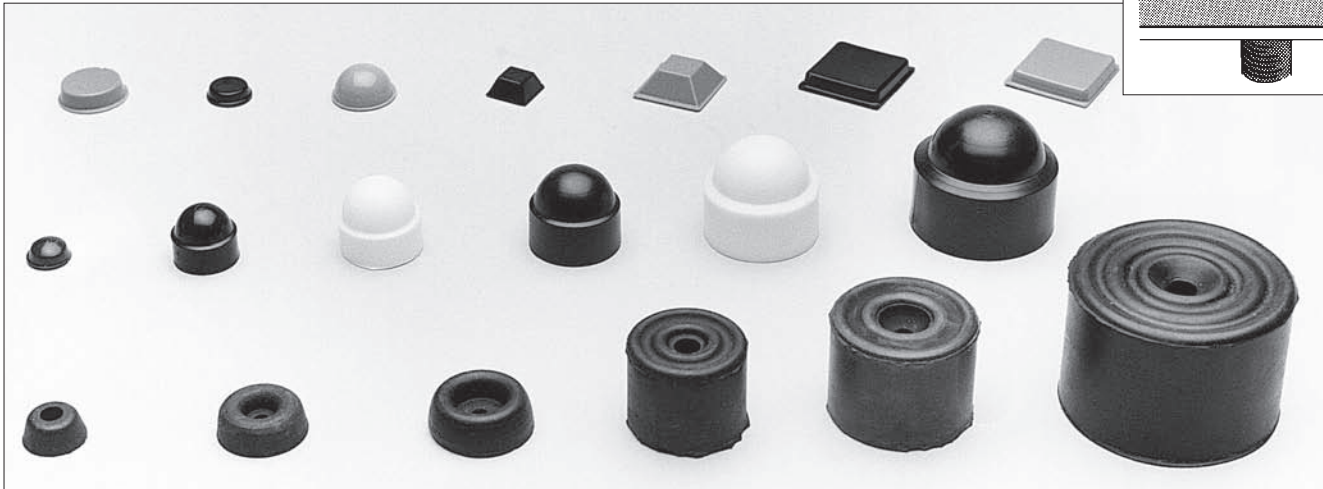


Rubber Buffers, Door Stops & Bolt & Nut Caps

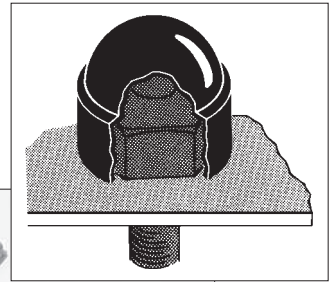

Stick On Feet

Type	Base Size	Height	Colour	Reference
Domed	11.0mm	5.0mm	Black	RM-2B
	11.0mm	5.0mm	Clear	RM-2C
	17.6mm	9.6mm	Grey	RM-8G
Flat Domed	12.7mm	3.5mm	Black	RM-1B
	20.0mm	5.1mm	Clear	RM-41C
	20.0mm	5.1mm	Grey	RM-41G
Sq. Pyramid	12.7mm	5.8mm	Black	RM-3RB
	20.5mm	7.6mm	Grey	RM-19G
Sq. Flat	25.4mm	4.7mm	Black	RM-36B
	25.4mm	4.7mm	Clear	RM-36C
	25.4mm	4.7mm	Grey	RM-36G

STICK ON FEET

Self adhesive bumper feet. Non-marking.

Buffers

Type	Base Size	Height	Colour	Reference
Conical	$\frac{5}{8}$ "	$\frac{9}{32}$ "	Black	BU-3
	$\frac{7}{8}$ "	$\frac{3}{8}$ "	Black	BU-5
	1"	$\frac{5}{16}$ "	Black	BU-6

BUFFERS

Natural rubber buffers. Designed for fixing with No. 4 x $\frac{3}{4}$ " screws for $\frac{5}{8}$ " and No. 8 x $\frac{3}{4}$ " for $\frac{7}{8}$ " and 1" diameters.

Bolt & Nut Caps

Thread Size	Colour	Reference
M6	Black	7450/1
M6	White	7450/2
M8	Black	7451/1
M8	White	7451/2
M10	Black	7452/1
M10	White	7452/2
M12	Black	7453/1
M12	White	7453/2
M16	Black	7455/1
M16	White	7455/2
M20	Black	7457/1
M20	White	7457/2

BOLT & NUT CAPS

Low density polyethylene, giving nuts and bolts protection against weathering.

Door Stops

Type	Base Size	Height	Colour	Reference
Flat	1. $\frac{1}{8}$ "	$\frac{15}{16}$ "	Black	DS-7
	1. $\frac{3}{8}$ "	1"	Black	DS-8
	2"	1 $\frac{1}{2}$ "	Black	DS-9

DOOR STOPS

Natural rubber, heavy duty door stops. White available to special order. Designed for fixing with No. 10 x 2" screws on $\frac{1}{8}$ " or $\frac{3}{8}$ ", No. 10 x 2 $\frac{1}{2}$ " on 2" diameters.